




rammount.com
1.800.497.7479
support@rammount.com

RAM® Combination Lock

Unlock Mode


To unlock, align factory preset “----” or current combination (A) and pull plunger outward (C) until indentation is visible next to the arrow (B).

Plunger IN: Latch will be locked in position
Plunger OUT: Latch will be loose

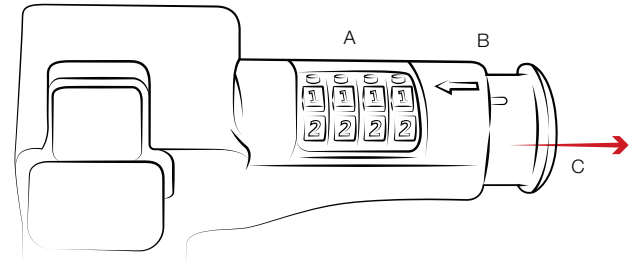

Changing Lock Combination

- 1 Set lock to unlock mode (see above), with plunger pulled outward.
- 2 On reverse side, locate square notch on of slot to the left of combination numbers. Spin slot downward, bringing square notch to bottom of slot. Pen or screwdriver recommended.
- 3 Set new combination on the front side of lock in line with arrow.
- 4 Move slot back upward to original position until it stops. New combination will be set.

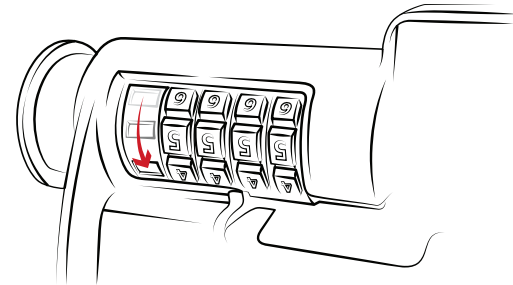

RMR-INS-CODELOCK